

AUTOGUARD ANTITHEFT DEVICES FORD F-SERIES TRUCK/SUV PART # 5471

www.AutoGuard.us

U.S. PATENT # D557587



INSTALLATION GUIDE
PLEASE READ THE INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.
FOR PRODUCT SUPPORT OR TECHNICAL INFORMATION,
CONTACT AUTOGUARD AT 1-480-893-2061 OR E-MAIL US AT AUTOGUARD@QWEST.NET.

PACKAGE CONTAINS:
(1)-AUTOGUARD/FORD PART

TOOLS REQUIRED FOR INSTALLATION
8MM SOCKET
TACK PULLER/SCREWDRIVER

WARRANTY INFORMATION:

AUTOGUARD warrants its products to be free from defects in material or workmanship for TWELVE (12) months from the date of installation. This warranty is limited to the replacement at AUTOGUARD'S option of the defective part. This warranty does not cover labor or parts damaged during installation.

To obtain performance under this warranty you must:

Contact AUTOGUARD for a return authorization number to return unit.

AUTOGUARD


11011 S 48th ST SUITE 103 PHOENIX AZ 85044

PHONE: 480-893-2061 FAX: 480-759-0190 E-MAIL-SALES@AUTOGUARD.US


WEB SITE: www.AUTOGUARD.US

Copyright © 2008 WorldWide Iron Inc. All rights reserved.


The reproduction of this work in any form is forbidden without written permission of the owners.

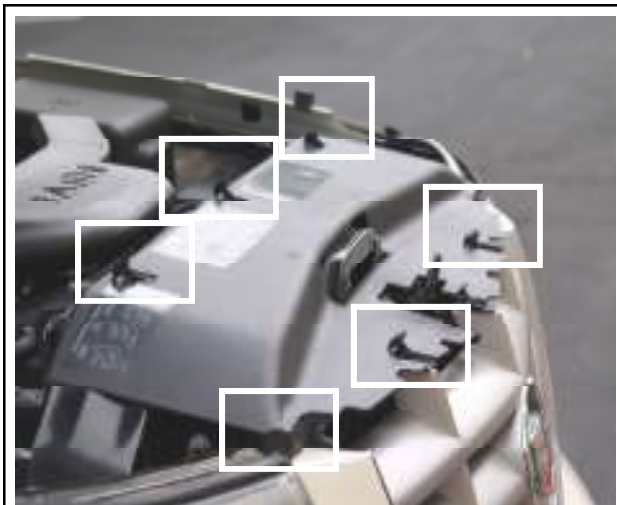

Step 1 With hood open, remove plastic core-support cover by locating and removing all two-piece plastic lock pins. (Some models do not have core-support)

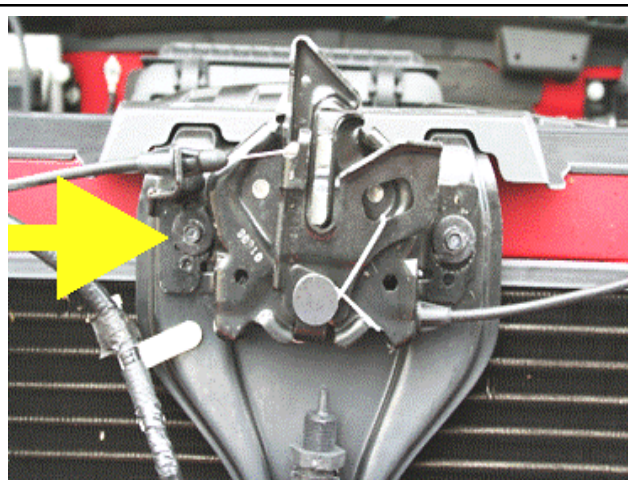

Step 2 Locate hood latch assembly anchor bolt on left side (passenger),
Remove bolt

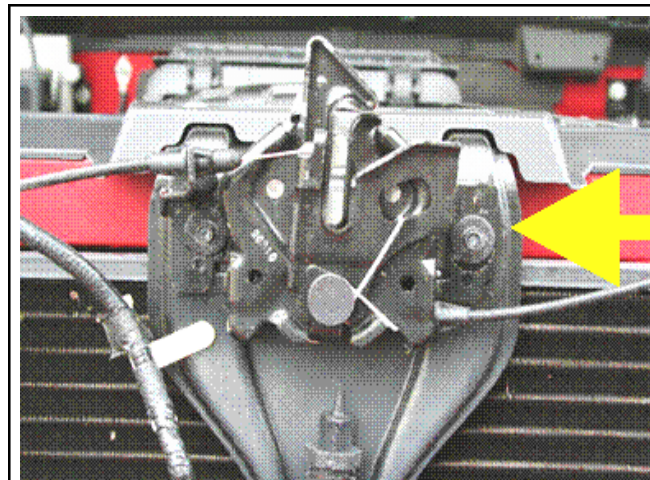

Step 3 Locate hood latch assembly anchor bolt on right side
Remove bolt



Step 4 Position AUTOGUARD over latch assembly aligning mounting holes with existing latch assembly holes.

PLEASE NOTE: Ford uses a clip nut on the frame for securing the anchor bolt to the frame. Be careful when removing bolt, so clip will not fall off of frame.



Step 5-a Insert Anchor bolt on left side hand tighten.



Step 5-b Insert Anchor bolt on right side hand tighten



Step 6 Tighten Anchor bolts, after you have aligned both sides.



Step 7 Reinstall plastic core-support cover by locating and inserting all two-piece plastic lock pins.
(Some models do not have core-support)

