

AUTOGUARD ANTITHEFT DEVICES FULL SIZE GM TRUCK/SUV PART # 2026

www.AUTOHOODLOCK.COM

U.S. PATENT # D557587



INSTALLATION GUIDE

PLEASE READ THE INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.
FOR PRODUCT SUPPORT OR TECHNICAL INFORMATION, CONTACT AUTOGUARD AT 1-480-893-2061
OR E-MAIL US AT AUTOGUARD@QWEST.NET.

PACKAGE CONTAINS:

- (1)-AUTOGUARD/SUV PART
- (1)-SECURITY BOLT
- (1)-CABLE COVER ARM
- (2)-8/32 LOCK NUTS

TOOLS REQUIRED FOR INSTALLATION

- 7/16 SOCKET/10MM SOCKET
- 11/32 OPEN END WRENCH
- 5/32 HEX KEY
- TACK PULLER/SCREWDRIVER
- WIRE CUTTER

WARRANTY INFORMATION:

AUTOGUARD warrants its products to be free from defects in material or workmanship for TWELVE (12) months from the date of installation. This warranty is limited to the replacement at AUTOGUARD'S option of the defective part. This warranty does not cover labor or parts damaged during installation.

To obtain performance under this warranty you must:

Contact AUTOGUARD for a return authorization number to return unit.

AUTOGUARD


11011 S 48th ST SUITE 103 PHOENIX AZ 85044

PHONE: 480-893-2061 FAX: 480-759-0190 E-MAIL-AUTOGUARD@QWEST.NET


WEB SITE: www.AUTOHOODLOCK.COM

Copyright © 2008 WorldWide Iron Inc. All rights reserved.


The reproduction of this work in any form is forbidden without written permission of the owners.

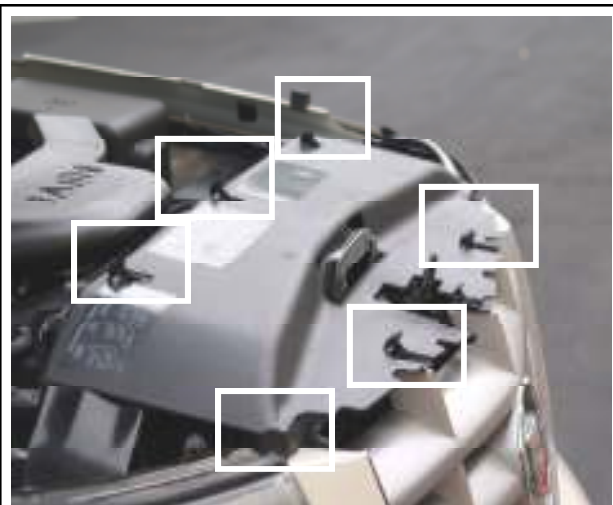

Step 1 With hood open, remove plastic core-support cover by locating and removing all two-piece plastic lock pins.

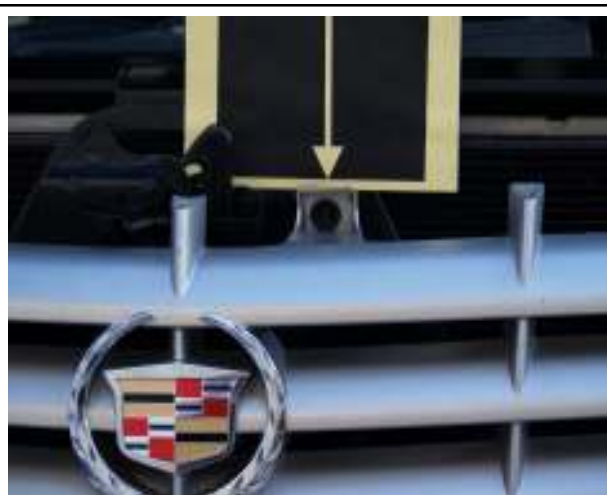

Step 2 Remove grille assembly. Some applications may require removing anchor bolt(s). Remove as needed.

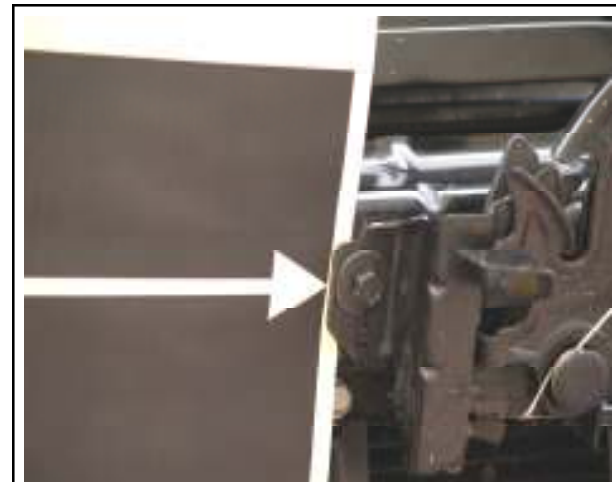

Step 3 With grille removed, locate hood latch assembly anchor bolt on left side (passenger), Remove bolt



Step 4 Position AUTOGUARD over latch assembly aligning mounting holes with existing latch assembly holes. Insert anchor bolt (s) and finger tighten.

Note: With Cadillac Installation do not insert anchor bolt on right side.



Step 5 Attach hood release cable guard to AUTOGUARD. With threaded studs in an upward position, locate and insert through mounting holes (see 5-a). Guide release cable into the rear facing cavity of cable guard and secure with provided nylon lock nuts.

PLEASE NOTE: HAND TIGHTEN NYLON NUT'S TO AVOID BREAKING THREADED STUDS ON CABLE GUARD



Step 5-a Cable guard with bolts installed

PLEASE NOTE:

GMC SIERRA: Cable Guard needs to be cut to 16 3/4" length for the Sierra.

2007 GM SUV'S: The 07 GM SUV's do not require the cable guard to be installed.

GM added a plastic piece to cover the cable but does not protect the latch



Step 6 Note: Cadillac applications
Before completing step 7, the grille will have to be modified by cutting off plastic tab located on back side of grille near right side mounting hole.

(see figure 7)



Step 7 CADILLAC INSTALLATION-
Position grille for reinstallation and align mounting holes of grille & AUTOGUARD with existing core support hole. Insert anchor bolt and tighten



Please note: Before completing Step 7, On some models there may be a need for a slight modification to the plastic core support or grille assembly before reinstalling the grille.