

# AUTOGUARD ANTITHEFT DEVICES

## HUMMER H3

### PART # 1754

www.AUTOHOODLOCK.COM


US PATENT # D557108

### INSTALLATION GUIDE

PLEASE READ THE INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION.  
FOR PRODUCT SUPPORT OR TECHNICAL INFORMATION, CONTACT AUTOGUARD AT 1-480-893-2061  
OR E-MAIL US AT [AUTOGUARD@QWEST.NET](mailto:AUTOGUARD@QWEST.NET)

PACKAGE CONTAINS:  
(1)-AUTOGUARD/HUMMER  
(2)-SECURITY BOLTS  
(1)-FENDER WASHER  
(1)-HEX NUT

TOOLS REQUIRED FOR INSTALLATION  
7/16 SOCKET/10MM SOCKET  
10MM OPEN END WRENCH  
5/32 HEX KEY

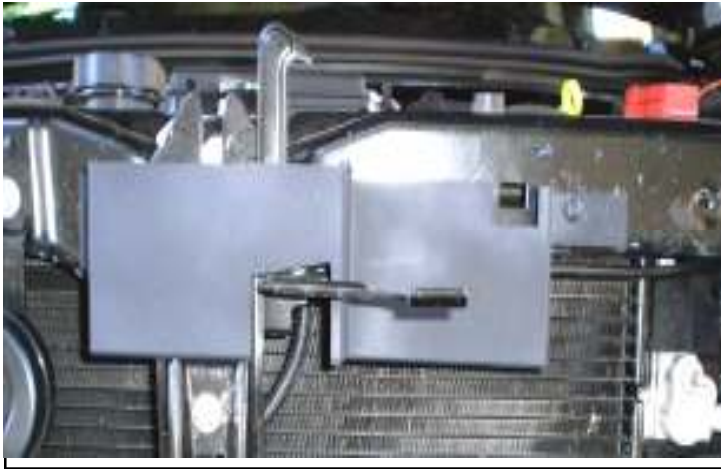

#### WARRANTY INFORMATION:

AUTOGUARD DEVICES LLC warrants its products to be free from defects in material or workmanship for TWELVE (12) months from the date of installation. This warranty is limited to the replacement at AUTOGUARD'S option of the defective part. This warranty does not cover labor or parts damaged during installation.

To obtain performance under this warranty you must:

Contact AUTOGUARD for a return authorization number to return unit.

#### AUTOGUARD

11011 S 48th ST SUITE 103 PHOENIX AZ 85044

PHONE: 480-893-2061 FAX: 480-759-0190 E-MAIL-[AUTOGUARD@QWEST.NET](mailto:AUTOGUARD@QWEST.NET)

WEB SITE: [www.AUTOHOODLOCK.COM](http://www.AUTOHOODLOCK.COM)

**Copyright © 2008 WorldWide Iron Inc.** All rights reserved.

The reproduction of this work in any form is forbidden without written permission of the owners.



Step 1 Remove grille bolts.  
Three bolts and two nuts.



Step 2 Remove grille.



Step 3 With grille removed, locate hood latch assembly anchor bolt on left side (passenger), remove bolt.



Step 4 Position AUTOGUARD over latch assembly aligning mounting hole on the left side with existing latch assembly hole. Insert provided anchor bolt and finger tighten.



Step 5 Align right bolt hole with precut hole on hummer frame. Attach AUTOGUARD with security bolt from the front. On back side use the fender washer and hex nut provided. Tighten.



Step 6 Tighten bolt on left side.



Step 7 Replace grille.

